


1-2. Opening, closing and locking the doors

Wireless remote control

The wireless remote control can be used to lock/unlock the vehicle and open/close the back door from outside the vehicle.

► Vehicles with power back door

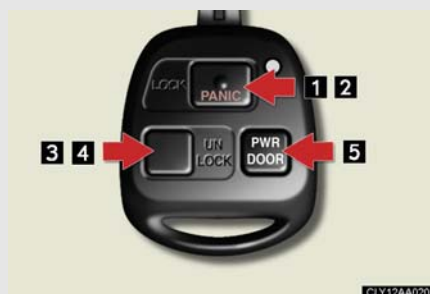

- 1 Locks all doors
- 2 Sounds alarm (→P. 74)

Push and hold.

- 3 Unlocks all doors

Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other doors.


- 4 Opens the windows and standard moon roof

Push and hold.

- 5 Opens and closes the back door

Push and hold.

► Vehicles without power back door

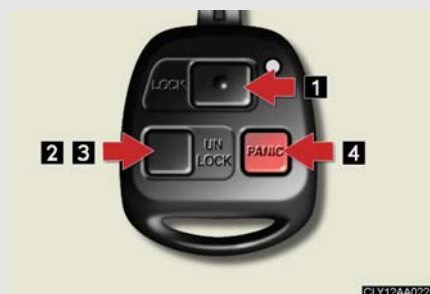

- 1 Locks all doors
- 2 Unlocks all doors

Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other doors.

- 3 Opens the windows and standard moon roof

Push and hold.

- 4 Sounds alarm (→P. 74)

Push and hold.

n **Back door operation**

The back door can be opened even if it is locked. Lock the back door again when you leave the vehicle. The back door will not lock automatically after it has been opened and then closed.

n **Operation signals**

Side doors: A buzzer sounds and the emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: Once; Unlocked: Twice)

Back door: A buzzer sounds twice and the emergency flashers flash twice to indicate that the back door has been opened/closed.

Windows and standard moon roof: A buzzer sounds to indicate that the windows and standard moon roof are operating.

n **Door lock buzzer**

If a door is not fully closed, a buzzer sounds continuously if an attempt to lock the door is made. Fully close the door to stop the buzzer, and lock the vehicle once more.

n **Security feature**

If a door is not opened within approximately 60 seconds after the vehicle is unlocked, the anti-theft system automatically locks the vehicle again.

n **Battery depletion**

→P. 349

n **Customization that can be configured at Lexus dealer**

Settings (e.g. door unlocking function) can be changed.
(Customizable features →P. 447)

n **Reversing the operation of the power back door**

Pressing the wireless remote control switch again while the power back door is operating will cause the operation to reverse. However, the reverse operation cannot be performed for the first second after automatic operation starts, even if the wireless remote control switch is pressed again.

n Certification for wireless remote control

- For vehicles sold in the U.S.A.

FCC ID: HYQ12BBT

FCC ID: HYQ13BBT

NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1 Reorient or relocate the receiving antenna.
- 1 Increase the separation between the equipment and receiver.
- 1 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 1 Consult the dealer or an experienced radio-TV technician for help.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- For vehicles sold in Canada

NOTE:


Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

1-2. Opening, closing and locking the doors

Side doors

The vehicle can be locked and unlocked using a key, wireless remote control or door lock switch.

n Key

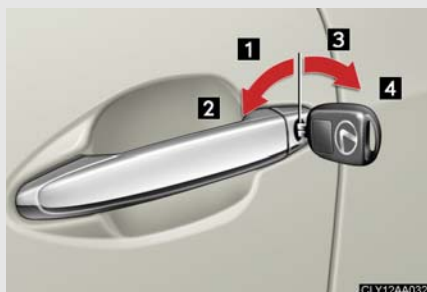


- 1** Locks all doors
- 2** Closes the windows and standard moon roof (turn and hold)
- 3** Unlocks all doors
Turning the key unlocks the driver's door. Turning the key again unlocks the other doors.
- 4** Opens the windows and standard moon roof (turn and hold)

n Wireless remote control

→P. 24


n Door lock switch

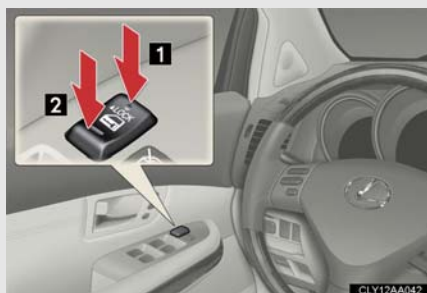

- 1** Locks all doors
- 2** Unlocks all doors

1-2. Opening, closing and locking the doors

n Inside lock button

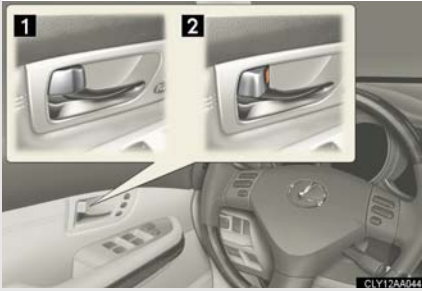

- 1** Locks the door
- 2** Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

Locking the front doors from the outside without a key

The door cannot be locked if either of the front doors is open and the key is in the engine switch.

Rear door child-protector lock



- 1** The rear door cannot be opened from inside the vehicle when the locks are set.

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

Automatic door locking and unlocking systems

The following functions can be set or cancelled:

| Function | Operation |
|---|---|
| Shift position linked door locking function | Shifting the shift lever out of P locks all doors. |
| Shift position linked door unlocking function | Shifting the shift lever to P unlocks all doors. |
| Speed linked door locking function | All doors are locked when the vehicle speed is approximately 12 mph (20 km/h) or higher. |
| Driver's door linked door unlocking function | All doors are unlocked when the driver's door is opened within 10 seconds after turning the engine switch to the LOCK position. |

To switch between setting and canceling, follow the procedure below:

STEP 1 Close all the doors and turn the engine switch to the ON position.
(Perform the step 2 within 10 seconds.)

STEP 2 Shift the shift lever to P or N, and press and hold the driver's door lock switch (**1** or **2**) for approximately 5 seconds and then release.

The shift lever and switch positions corresponding to the desired function to be set or canceled are shown as follows.



1-2. Opening, closing and locking the doors

| Function | Shift lever position | Switch position |
|--|----------------------|-----------------|
| Shift position linked door locking function | P | 1 |
| Shift position linked door unlock-ing function | | 2 |
| Speed linked door locking function | N | 1 |
| Driver's door linked door unlocking function | | 2 |

When the setting or canceling operation is complete, all doors are locked and then unlocked.

n **Impact detection door lock release system**

In the event that the vehicle is subject to a strong impact, all the doors are unlocked. Depending on the force of the impact or the type of accident, however, the system may not operate.

n **If a wrong key is used**

The key cylinder rotates freely to isolate inside mechanism.

n **Customization that can be configured at Lexus dealer**

Settings (e.g. unlocking function using a key) can be changed.
(Customizable features →P. 447)

 **CAUTION****n To prevent an accident**

Observe the following precautions while driving the vehicle.

Failing to do so may result in a door opening and an occupant falling out, resulting in death or serious injury.

I Always use a seat belt.

I Always lock all doors.

I Ensure that all doors are properly closed.

I Do not pull the inside handle of the doors while driving.

The doors may be opened and the passengers are thrown out of the vehicle and it may result in serious injury or death.

Be especially careful for the front doors, the doors may be opened even if the inside lock buttons are in locked position.

I Set the rear door child protector locks when children are seated in the rear seat.


1-2. Opening, closing and locking the doors

Back door

The back door can be opened using the back door opener.

In addition, the power back door can be opened/closed using the power back door switch or wireless remote control.

n Back door opener

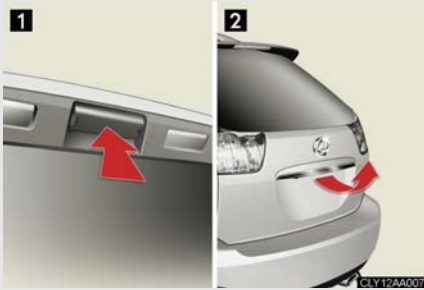

1 Push up

2 Raise

n Power back door switches (vehicles with power back door)

► Instrument panel



1 Pull down the cover.

2 Push the switch for 1 second to open/close.

Pressing the switch again while the power back door is operating will cause the operation to reverse.

However, the reverse operation cannot be performed for the first second after pressing the switch to operate the door.

► Back door



Push the switch to close.

Pressing the switch again while the power back door is closing will cause it to open again.


However, the reverse operation cannot be performed for the first second after pressing the switch to close the door.

The back door can be opened even if it is locked. Lock the back door again when you leave the vehicle. The back door will not lock automatically after it has been opened and then closed.

A buzzer sounds twice and the emergency flashers flash twice to indicate that the back door has been opened/closed.

n Wireless remote control (vehicles with power back door)
→P. 24

Canceling the power back door system (vehicles with power back door)

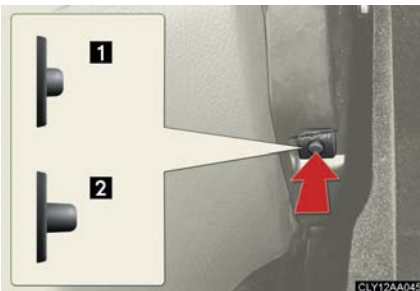

Turn off the main switch in the glove box to disable the power back door system.

1 ON

2 OFF

The back door cannot be opened even with the wireless remote control or power back door switch.

n Luggage compartment light



The luggage compartment light turns on when the back door is opened and the light switch is ON.

n Back door handle




Use the back door handle when closing.

If the vehicle is equipped with a power back door, the back door automatically pulls closed in the event that the door is not properly latched when closed.

n If the back door opener is inoperative

The back door can be opened from the inside.

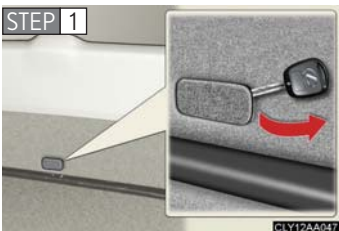

Remove the cover.



Push the lever.

n The power back door can be opened when

The engine switch is in the ON position, and the shift lever is in P.

n Jam protection function

If anything obstructs the power back door while it is closing/opening, the back door will automatically operate in the opposite direction.

n If the power back door does not work

The back door must be initialized. To initialize, close the back door completely by hand.

n Customization that can be configured at Lexus dealer

Settings (e.g. beep sound) can be changed. (Customizable features → P. 447)

! CAUTION

Observe the following precautions.

Falling to do so may result in death or serious injury.

n Keep the back door closed while driving

If the back door is opening, the luggage will be thrown out and exhaust gases will be entered in the vehicle.

n When the back door is opened while parking

The open back door hides the rear lights. Other road users must be warned of the presence of your vehicle by a warning triangle or other device.

n Operating the power back door

1 Check to make sure that passengers do not have any part of their body in a position where it could be caught or hit when the back door is being operated.

1 Careful attention is needed so as not to get your fingers trapped as the back door automatically closes when it has not been fully closed.

1 Do not allow children to operate the back door.

Closing the back door on someone can cause serious injury, and in some instances, even death.

CAUTION

n Jam protection function

- I** Never try jamming any part of your body to activate the jam protection function intentionally.
- I** The jam protection function may not work if something gets caught just before the back door

NOTICE

n To prevent damage to the back door components

- I** Do not apply any force, paint or let any other foreign matter on the damper.
- I** Do not apply excessive force when the back door closer is operating.
- I** Make sure there is nothing in the doorway before closing.